# VICHIDA BRIGHTLY EVERYWHERE LF200 DC24V 80W FLOOD LIGHT



We are committeed to provide high performance, high quality, high durability product as a reasonable price that lighting experts wanted. We aim for world best in outdoorlighting and specific object lighting




### Strength of product

### Strength of product


#### 01. METAL HALIDE SUBTITUTE

- -Possible to replacement with metal halide 250W
- -10%~25% brightness up

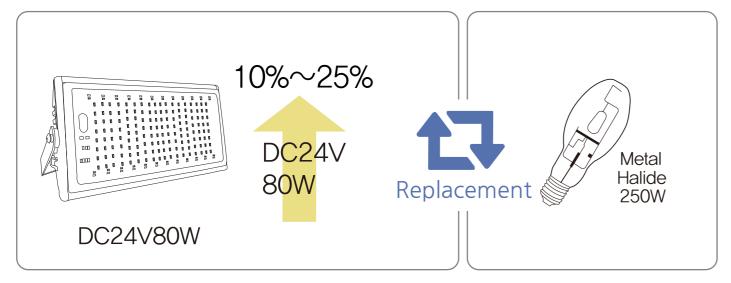


#### 03. SAVING ELECTRICITY COST

-50%~70% electricity cost reduction

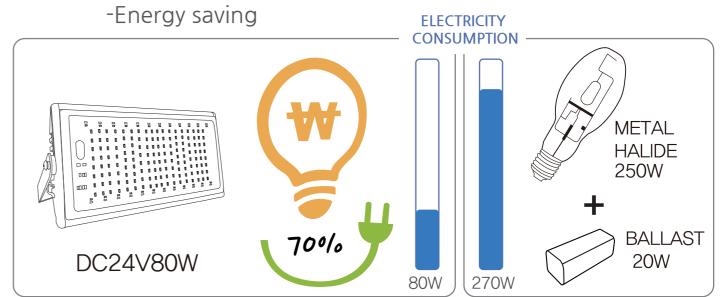

#### 02. PERFECT WATERPROOF

- -IP67
- -Related patent
- -Moisture proof, micro dust proof, frozen proof

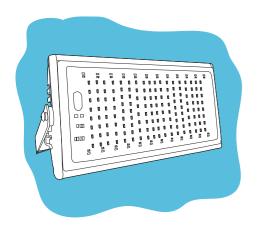








#### 04.HIGH DURABILITY, ULTRA LIGHT

- -Possible to control the angle
- -simple installation
- -ship, heavy machine, vehicle

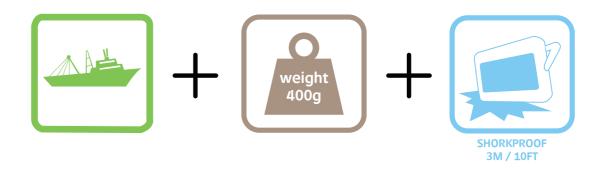


DURABILITY & ELECTRICAL SAFETY TEST VIDEO
: http://www.egmtech.kr/?page\_id=1350&uid=17&mod=document

### LF200 Series (SPEC)


#### **■** Specifications

TOTAL FLUX	ILLUMINANCE(1M)	CRI	ССТ
7,525(lm)	2,570(lux)	OVER 75	6000K/3000K

IP LEVEL	WEIGHT	TEMPERATURE	POWER	INPUT VOLTAGE	POWER FACTOR
IP67	2 Kg	−20~40°C	80W	DC24V	OVER 0.9

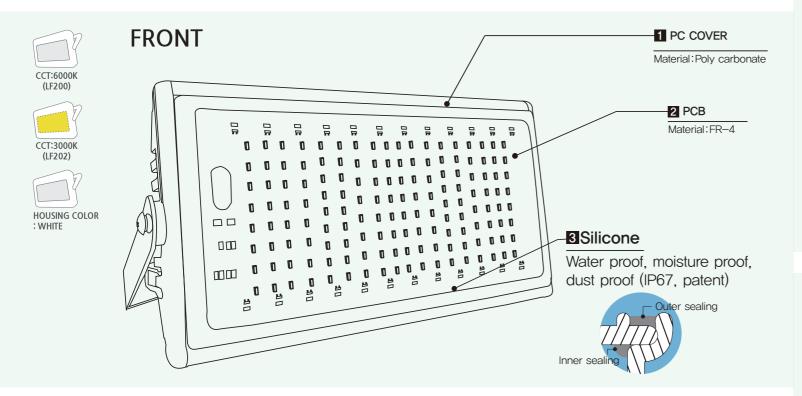

#### ■ Light distribution & Cone lux level

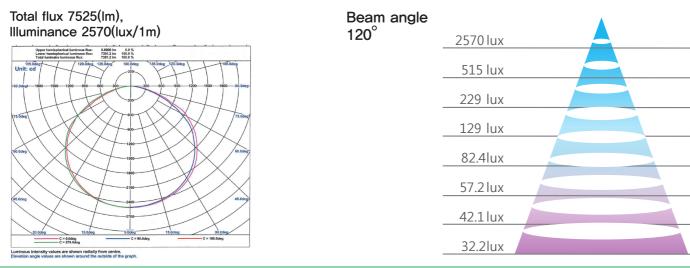

1.0m

2.0m

3.0m

4.0m


5.0m


6.0m

7.0m

8.0m

## LF200 Series (STRUCTURE)

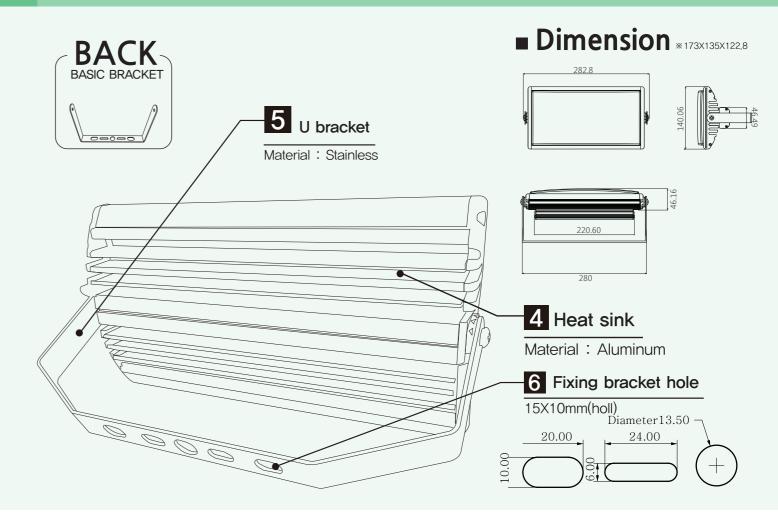

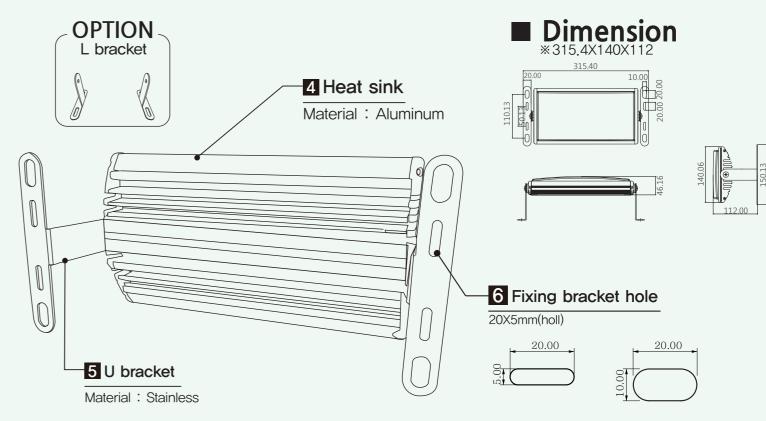


### Installation

### Packing


1.Packing(Inbox)

● BOX SIZE:315(I)X155(w)X140(h)

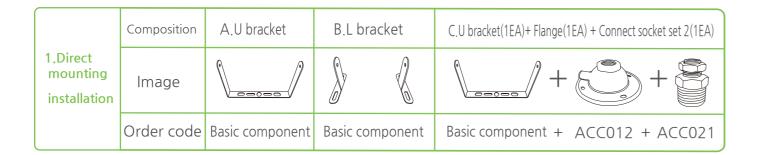

#### Setting up of the detailed way


#### A.U bracket type

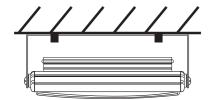








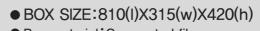


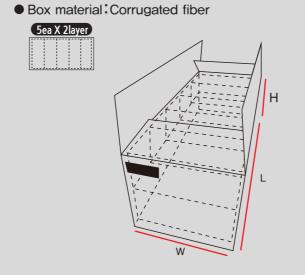



4. Pallete loading

2.Inbox size

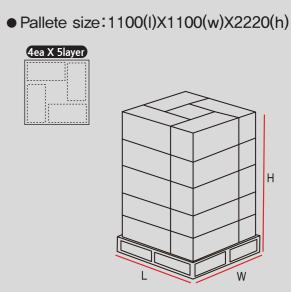


#### C.Direct Flang type



① Install the flange on the buttress



② Socket fitted to the product

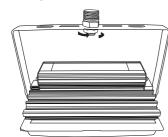

③ Flange coupling with the socket



### Test result

	TEST	TEST condition	Sample qty / Defect qty	Remark
1	Water proof test	□. Check the normal operating after put in water tank For 1 week(9hr on / 15hr off per 1 cycle).	5/0	
		□. Check the moisture permeation after waterproof test and disassemble inside.	5/0	
	Aging test	□. Check the product condition after aging for 120hours under the rated voltage and room temperature.	5/0	
2		□. Check the illuminance value fluctuation range after 4hours aging, and 120 hours aging.	5/0	
		□ Check the discolor, defect of PCB, PC Cover and any other part.	5/0	
3	Applied electric test under high/low temperature	□. Check the normal operating after test under 60°C and -50°C per 120hours.	5 / 0	
4	EMI test	□. Check the pass of KC standard with conduction and radiation.	5 / 0	
5	Surge test	□. Check the normal operating under the 5KV, 10KV electric current.	5/0	
6	Drop test	□. Check the crack or any other damage after drop from 2M height.	5 / 0	
7	, .	□. 220V product : Check the normal operating on 210V ~240V (sustainment time : 2hours)	5/0	
8	Temporary over voltage test	□. Check the normal operating under over 30% of rated voltage within 3 sec.	5 / 0	
9	Over voltage test	□. Check the normal operating under over 20% of rated voltage.(20 hours lasts under AC290V)	5 / 0	
10	Converter inside	□. Check the converter inside temperature after 5 hours aging under room temperature, and record it.(MAX temperature)	5/0	
11	Component temperature	□. Check the most hottest part of temperature, and record it.(measure it after 3 hours power on)	5/0	


#### Caution

### Notice for using products



-Do not remodel or disassemble the product arbitrarily. (You can not get A/S

when arbitrarily)

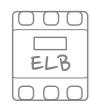

-Please be sure to install in where circuit breaker in installed.



-Please be sure to install at power off.



-Do not touch the product during the light on for a long time.



-Please do not look light directly when light on.


### Checklist for product problem



-If LED doesn't light on, please check the power circuit breaker.



-Make sure the power switch is set to ON.

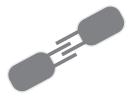

-If the product does not light up after power on, please check the power cable contact status.



-When the product have problem, do not disassemble the product arbitrarily, and ask to store which you bought.

(You can not get A/S when arbitrarily disassemble)



If product has trouble caused by natural disaster like thunderbolt or surge, you can not get free A/S. (It need cost for A/S)